

CARE & MAINTENANCE GUIDE

Product Care Instructions

Range Name	Redwood Outdoor Range
------------	-----------------------

The Redwood Range is crafted from durable Scandinavian Redwood and is suitable for outdoor use.

To help preserve the appearance and maximise the life of your furniture, we recommend the following care:

- Clean regularly using a soft cloth or brush with warm water and a mild detergent. Avoid abrasive cleaners, scourers or harsh chemicals.
- Remove dirt, leaves and debris from the furniture regularly to help prevent moisture build-up.
- Wipe away spills and standing water where practical.
- As a natural timber product, Scandinavian Redwood will weather over time when exposed to the outdoor elements. This may include the timber developing a soft silver-grey patina, minor surface checking and natural movement caused by changes in temperature and humidity. These characteristics are normal and do not affect the structural integrity of the product.
- If you wish to maintain the original timber colour, a suitable exterior timber oil or timber protector may be applied.
- Periodically check and tighten any fixings where applicable.
- Avoid dragging the furniture across hard surfaces. Lift and reposition the furniture to prevent unnecessary stress on joints and legs.

Natural Timber & Warranty

As this product is manufactured from natural timber, variations in colour, grain and weathering are to be expected and form part of the product's natural character. These natural characteristics are not considered manufacturing defects.

Following the recommended care and maintenance instructions will help maximise the life and appearance of your furniture.

While the Redwood Range is designed for outdoor use, storing furniture in a covered outdoor area when not in use will help maintain its appearance and extend its service life.