





VERSATEK 12 Hole Cubby Unit

Assembly Instructions for colours Natural Birch, Contemporary Oak, White & Nordic

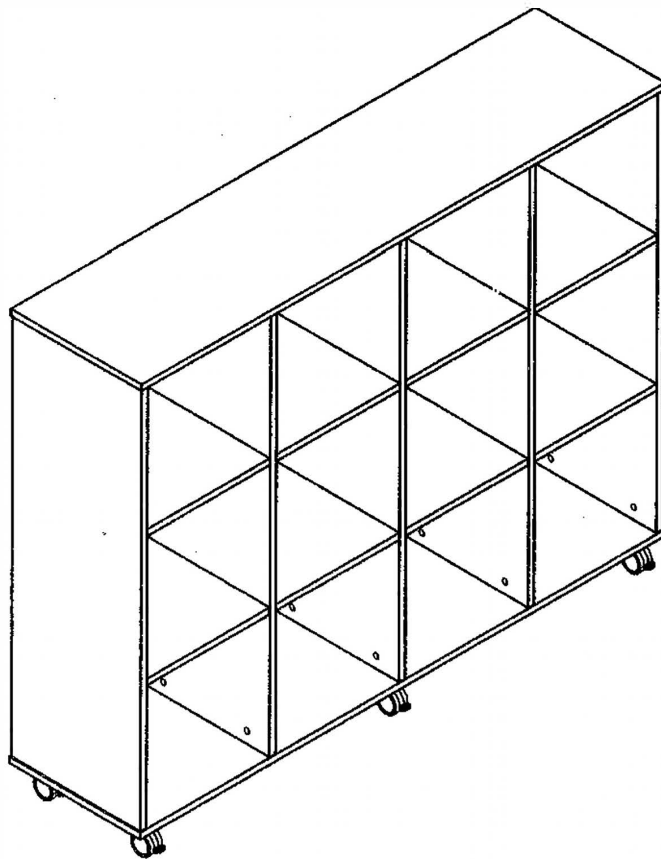

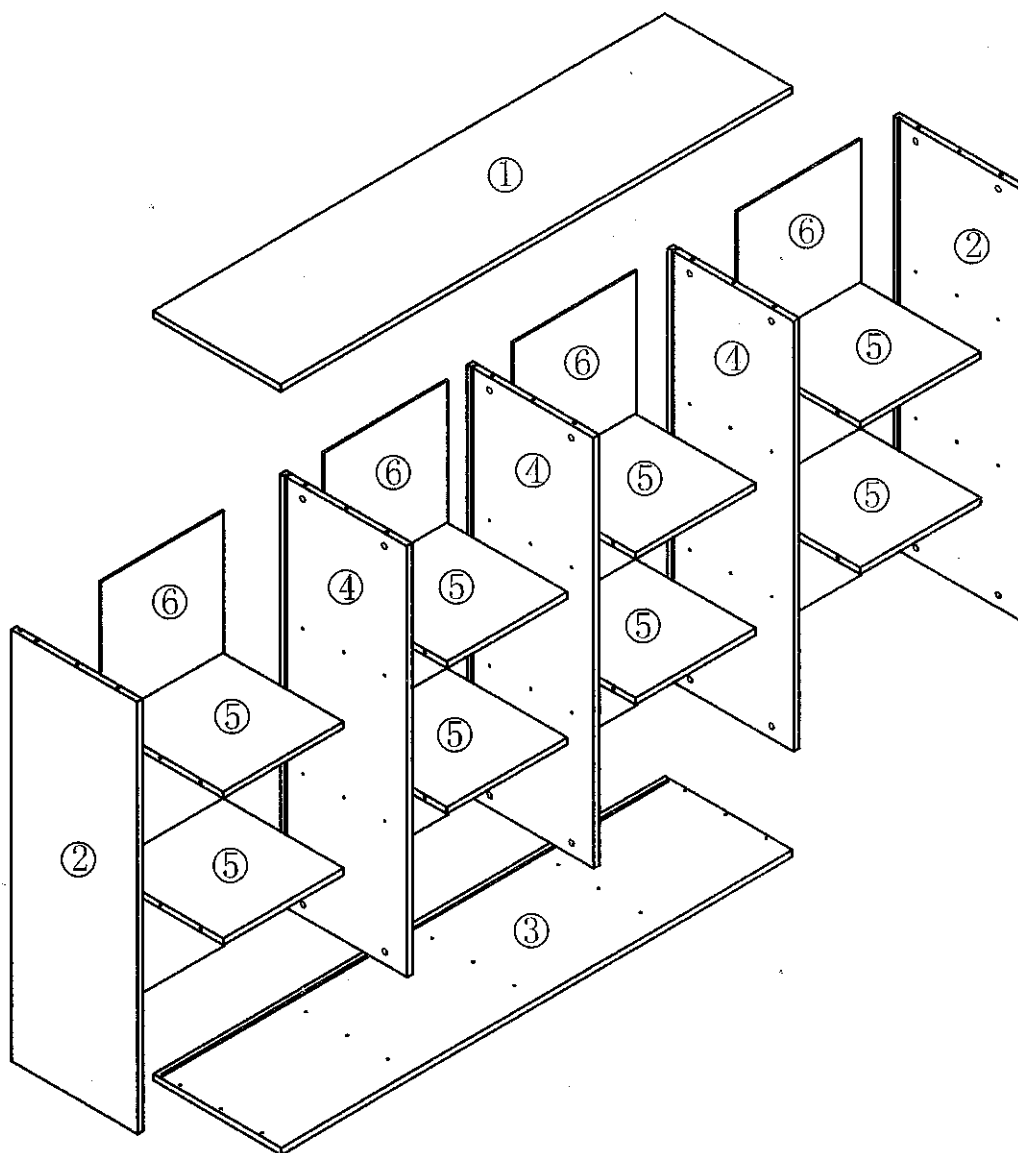


HARDWARE LIST

Dowel  M6X34mm A=52	Lock  M15X12mm B=52	Dowel  M6X30mm C=26	Screw  M3.5X14mm D=16	Hinge  H75mm E=6	 16*13*10mm F=16
Screw  M4X16mm G=24					


STEP 1

A  20 PCS

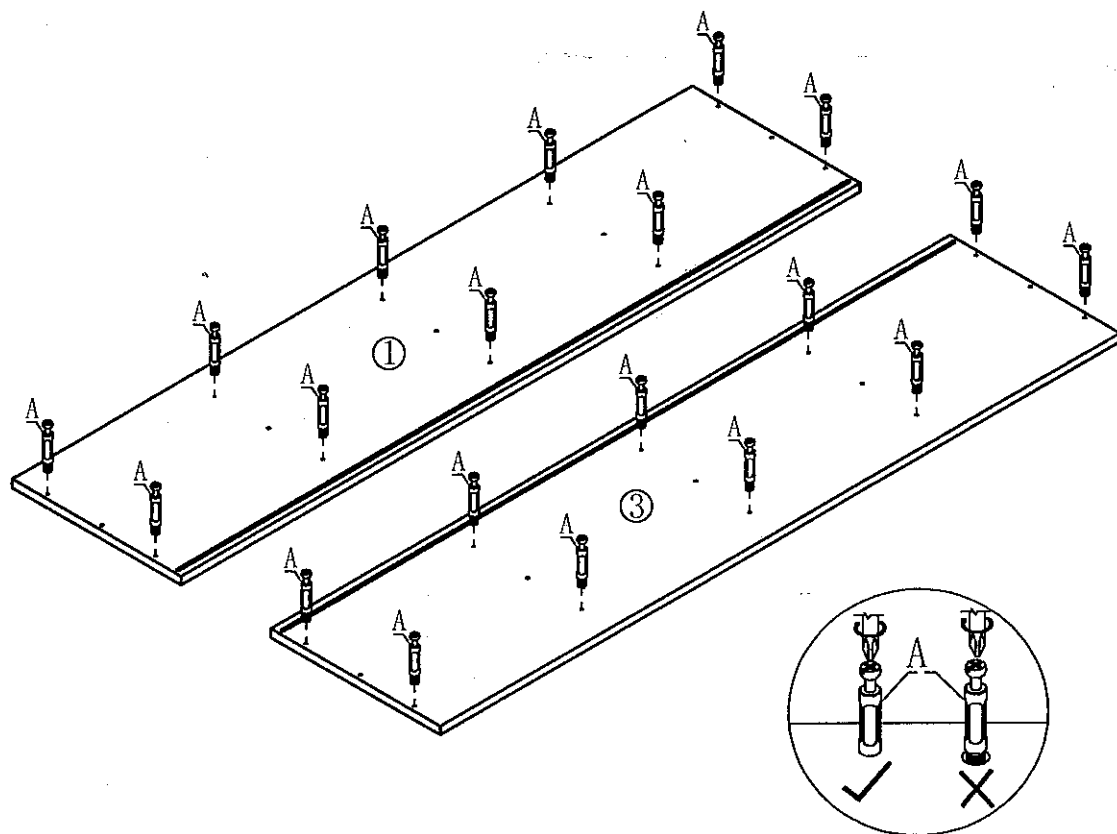



STEP 2

A  8 PCS
B  20 PCS

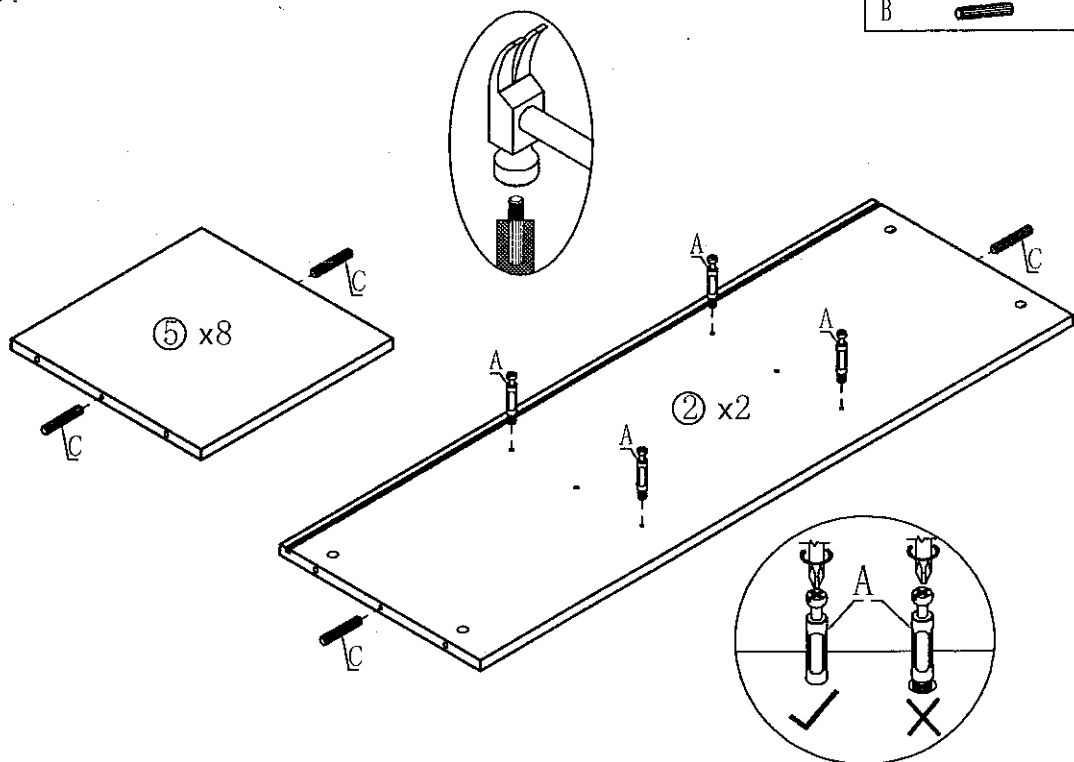


STEP 3

A		24 PCS
C		6 PCS

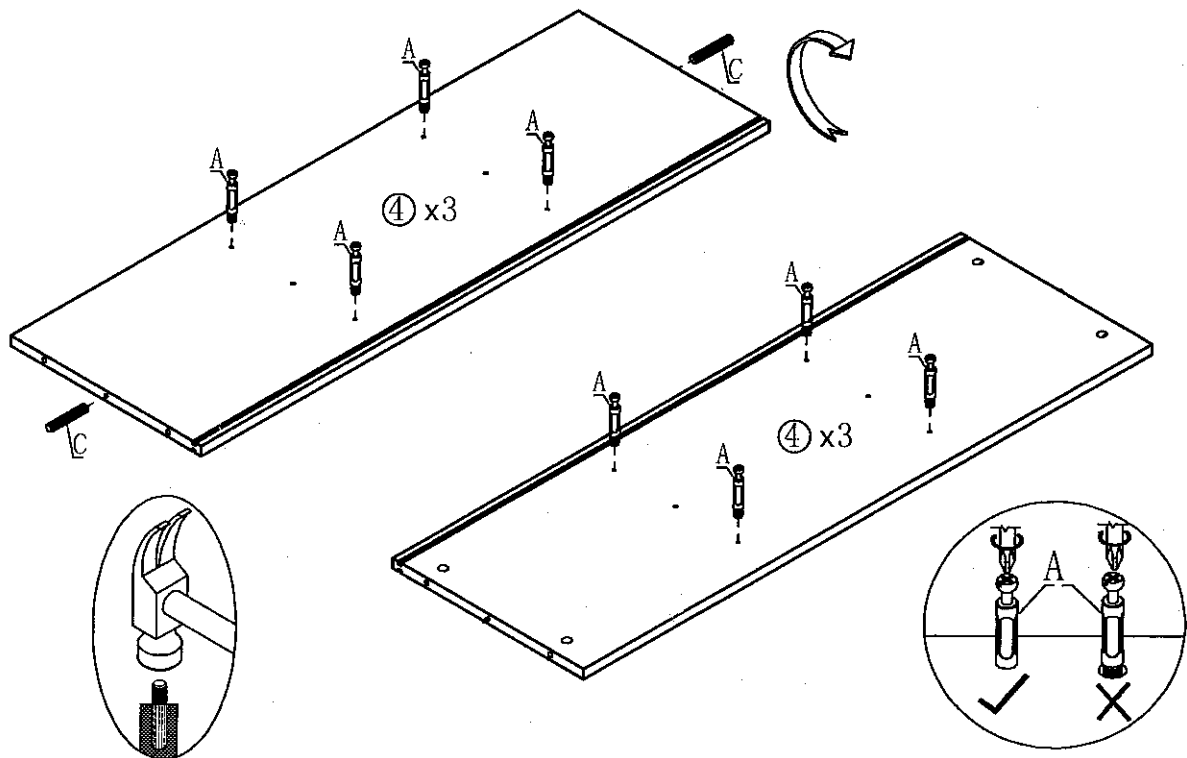

STEP 4

B		4 PCS
---	---	-------

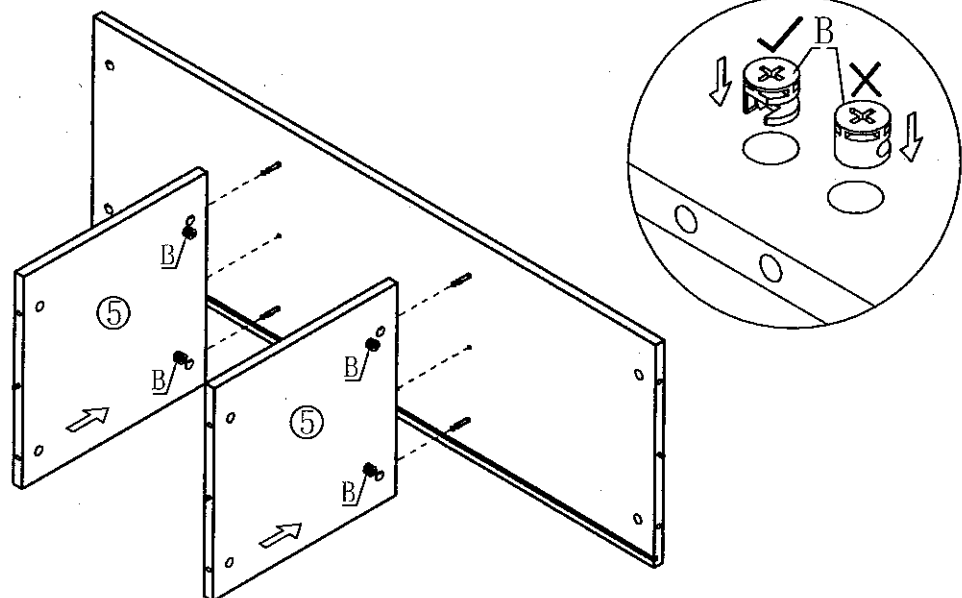


STEP 5

B



4 PCS

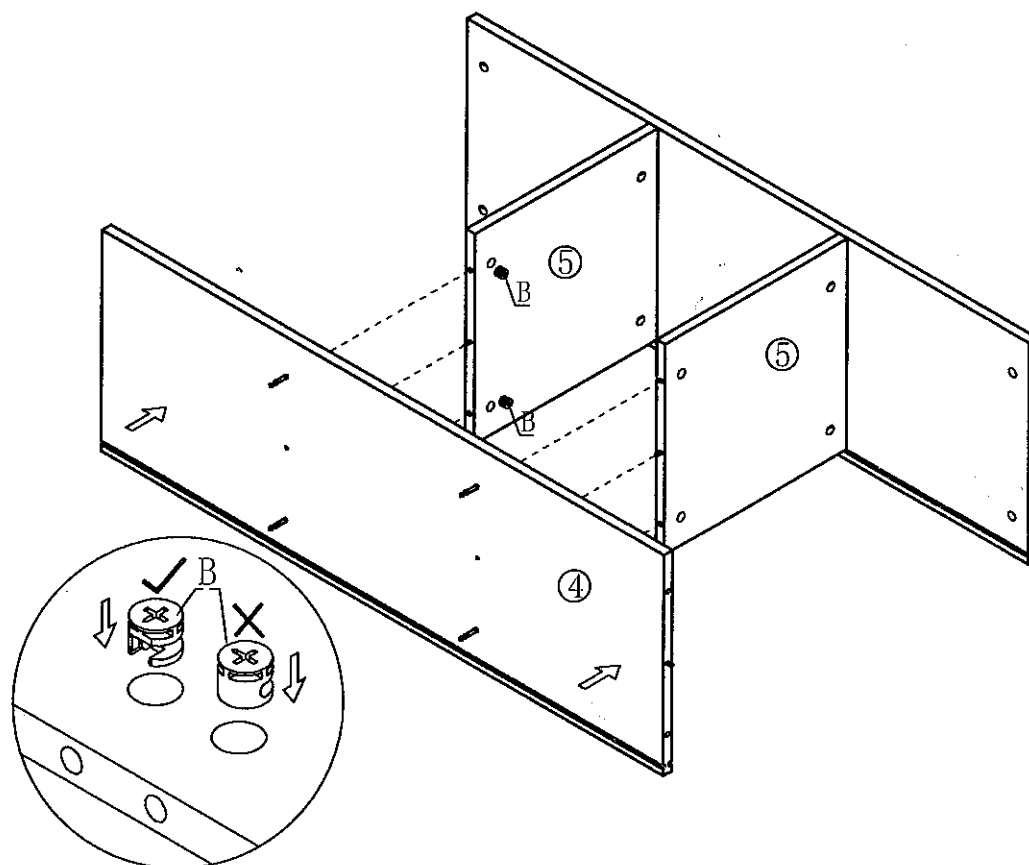


STEP 6.

B



4 PCS


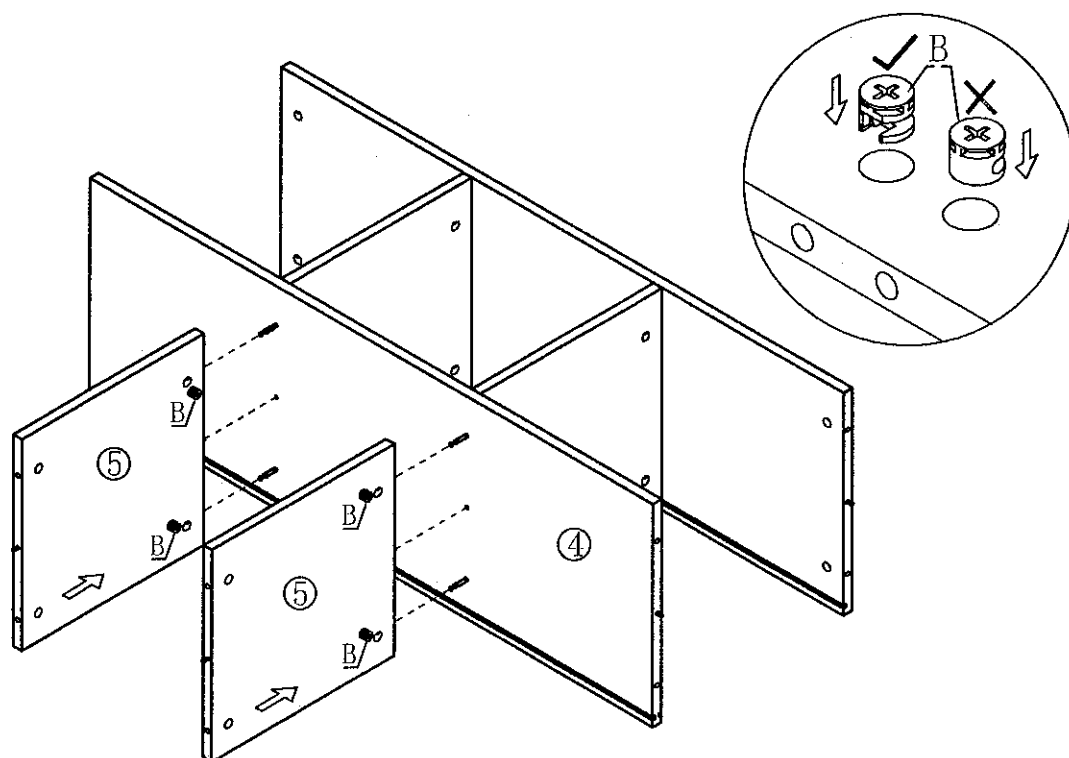


STEP 7

B



4 PCS

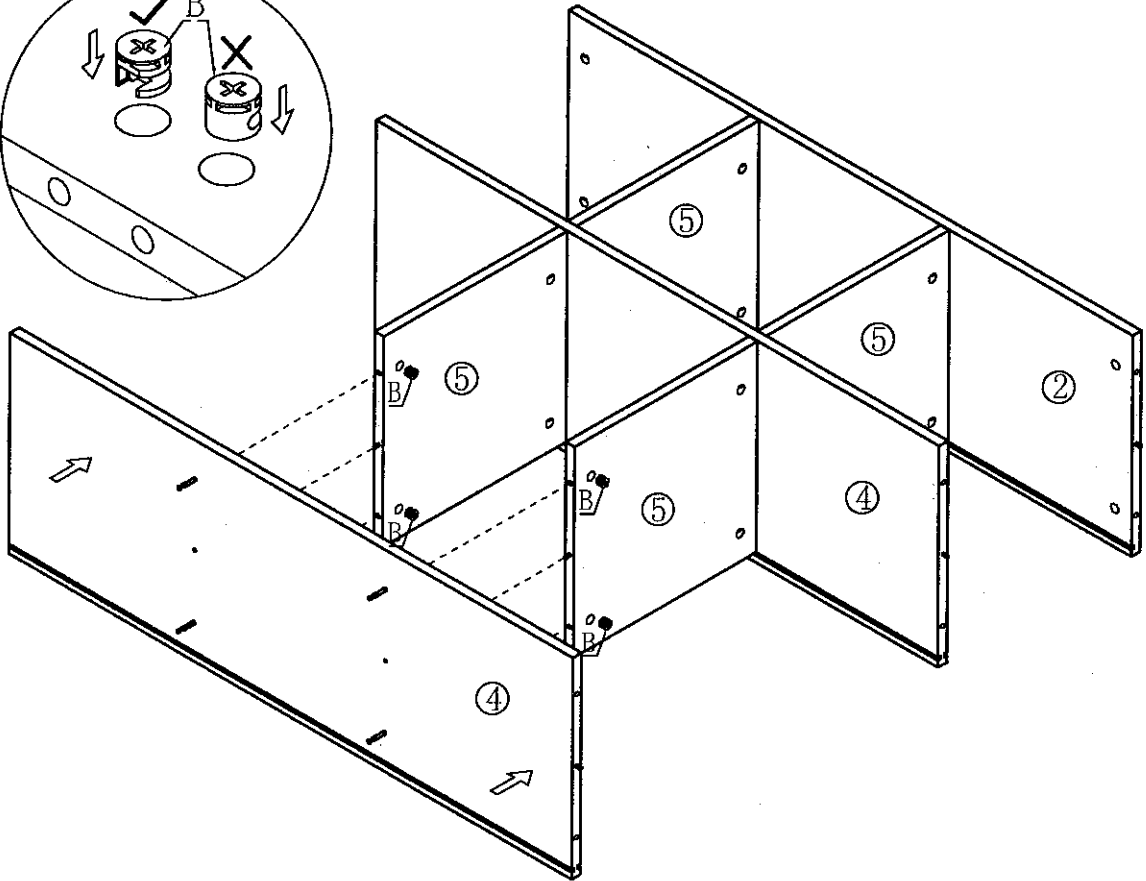
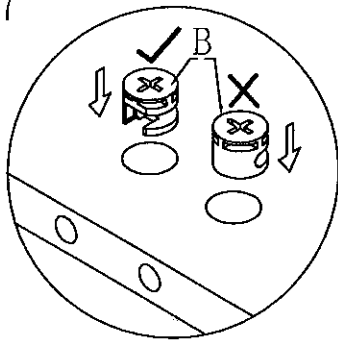


STEP 8

B



4 PCS

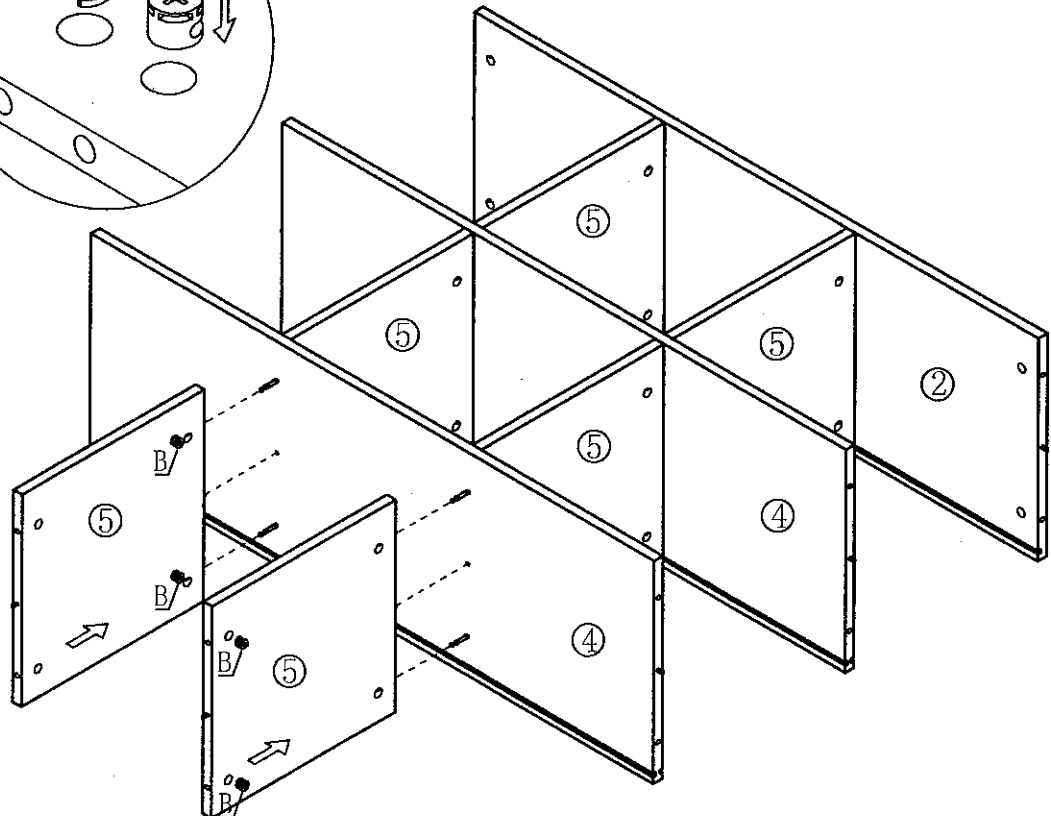
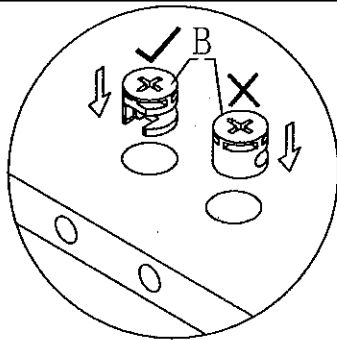


STEP 9

B



4 PCS

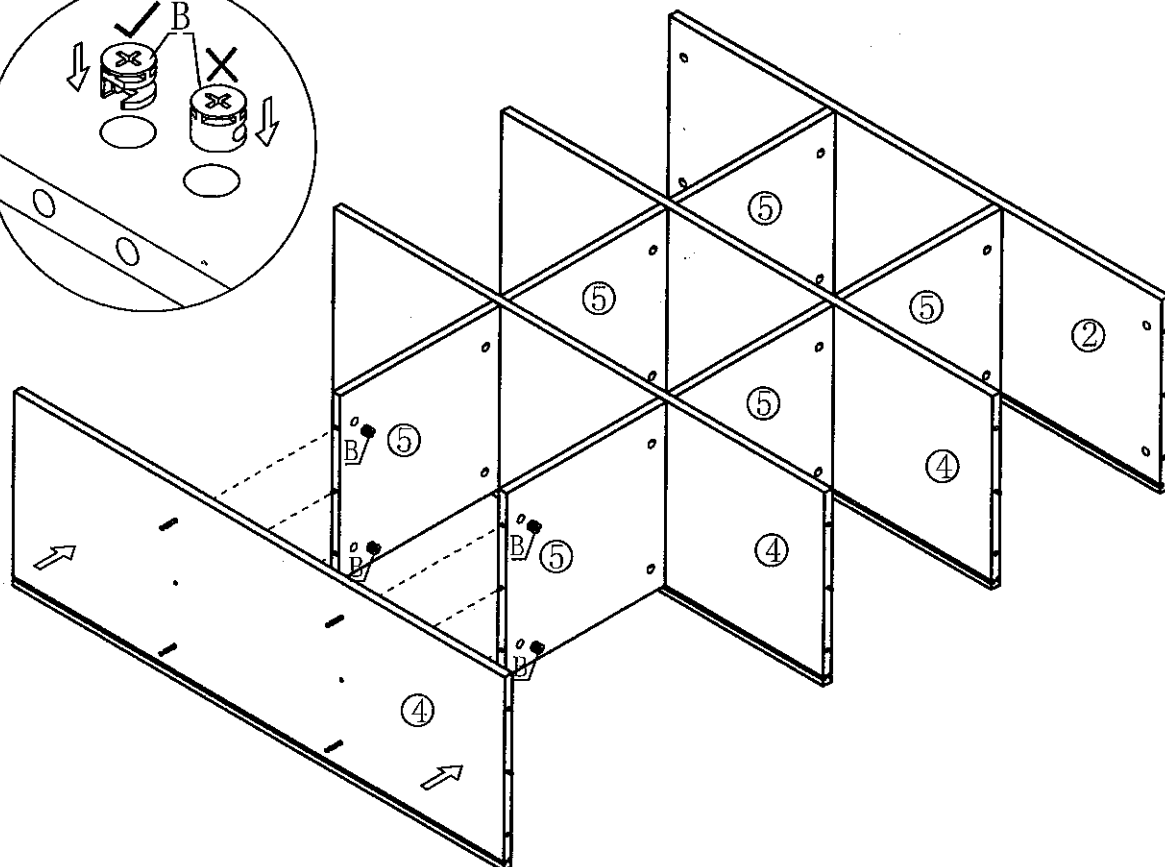
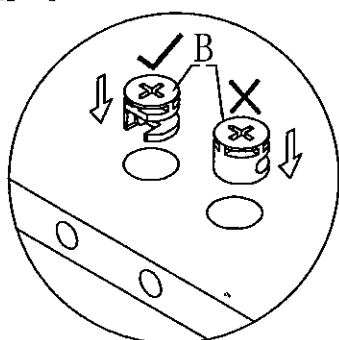


STEP 10

B



4 PCS

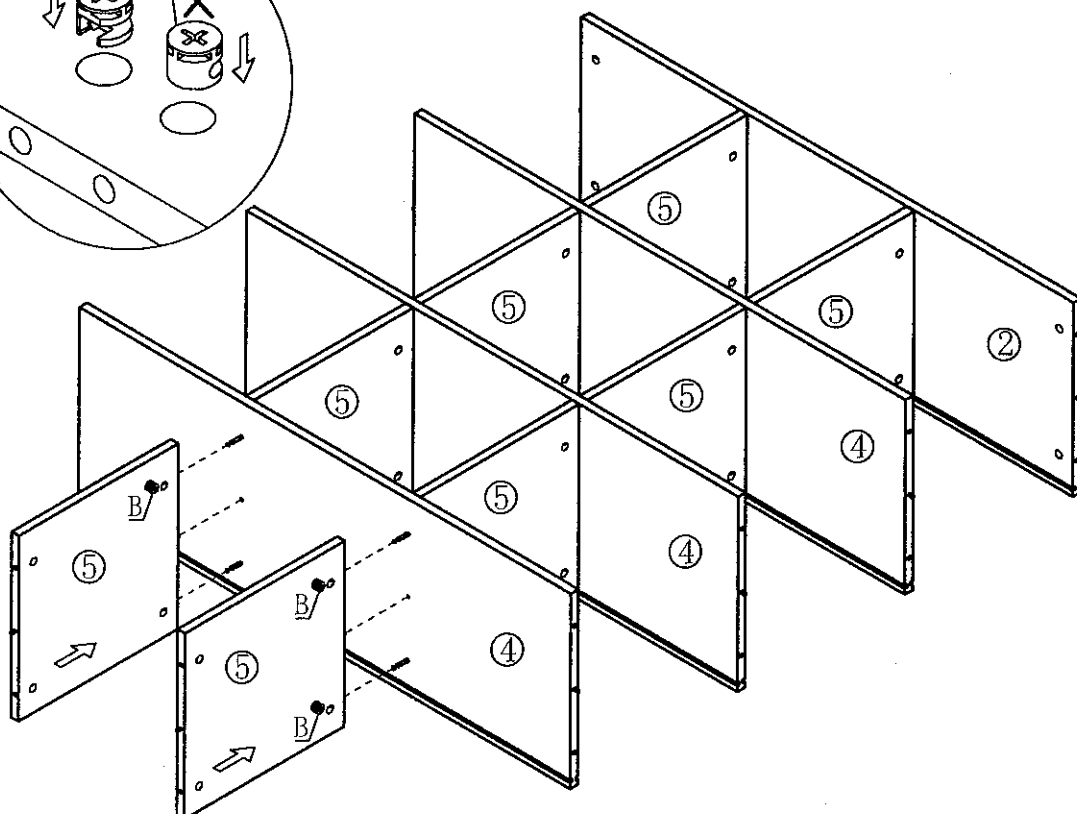
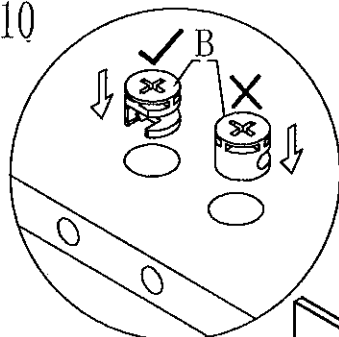


STEP 11

B



4 PCS

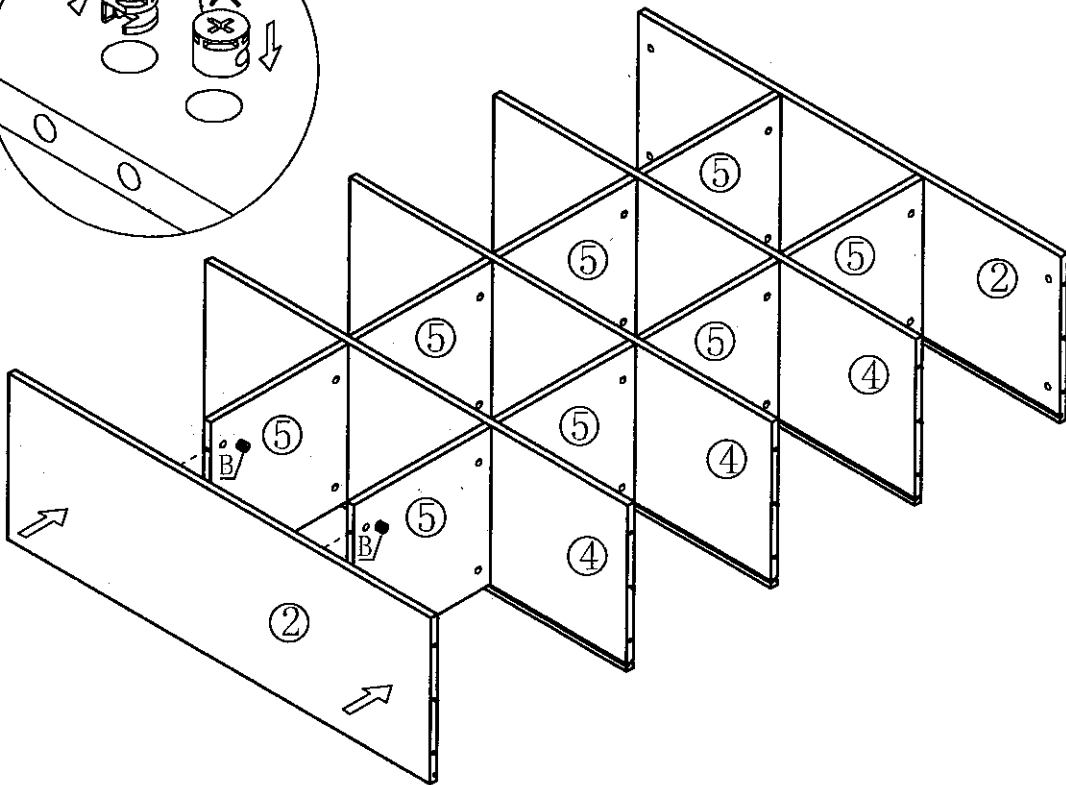
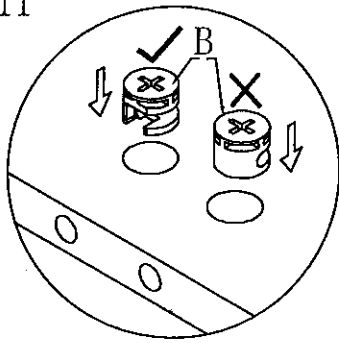


STEP 12


B



10 PCS

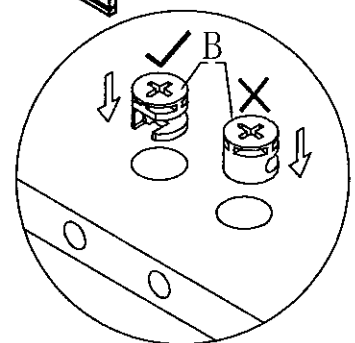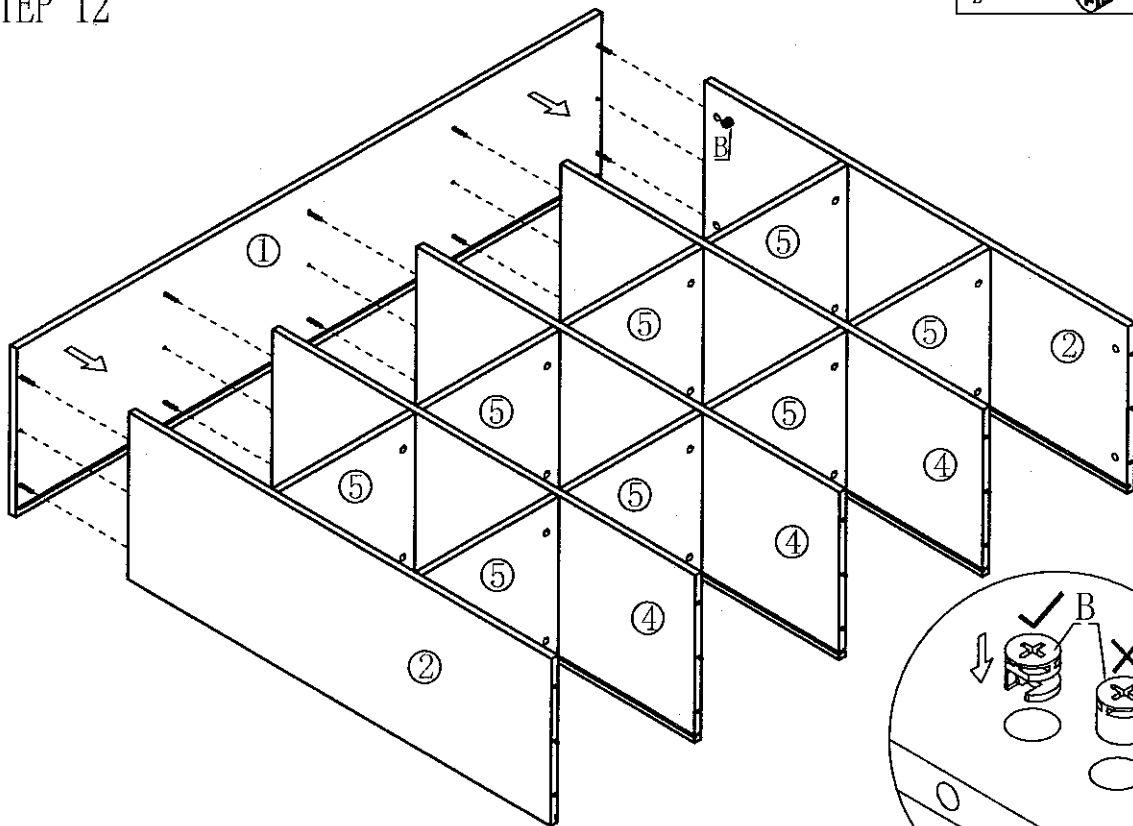

STEP 13


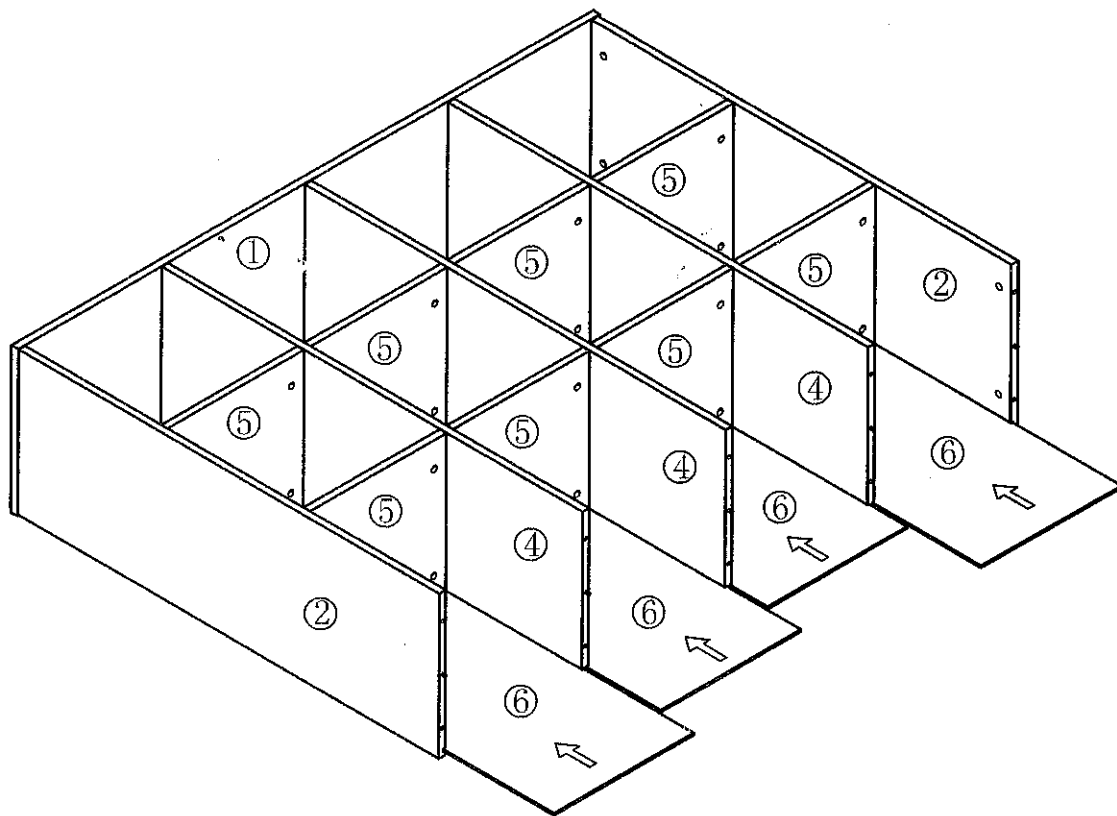


STEP 14


B




10 PCS

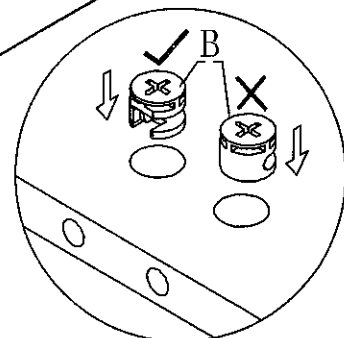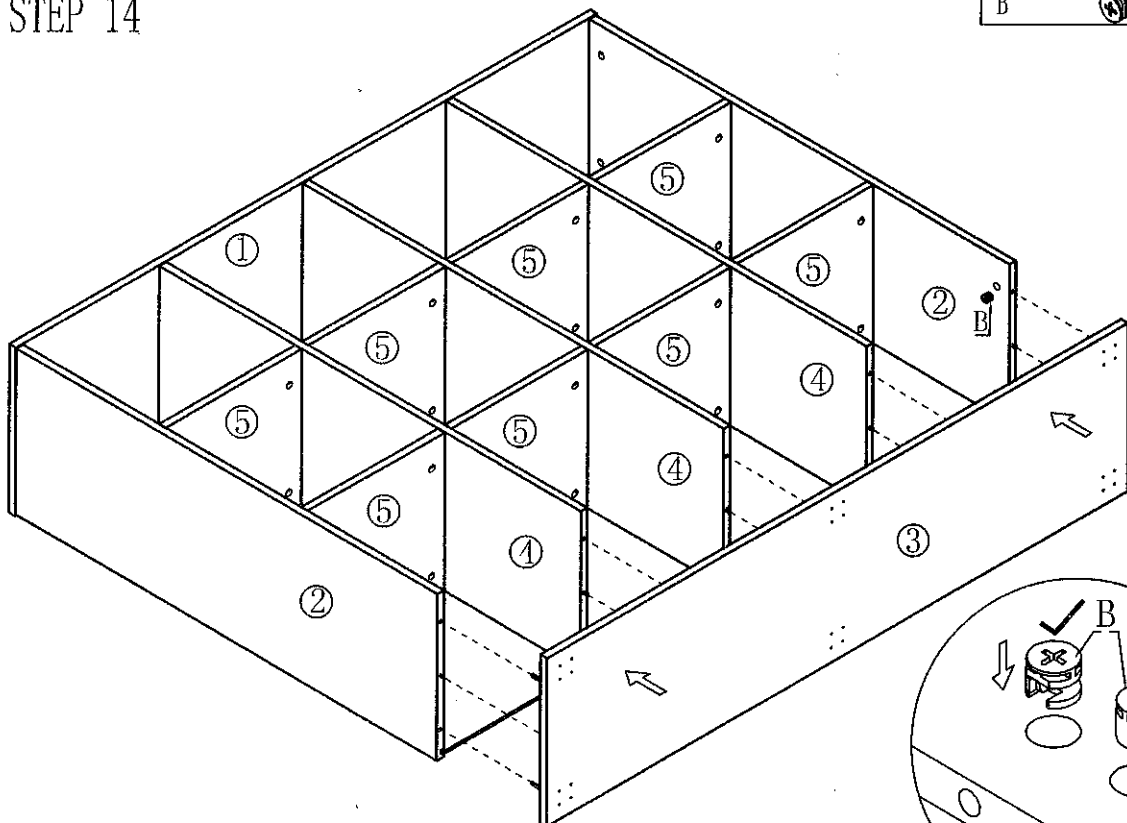


STEP 15

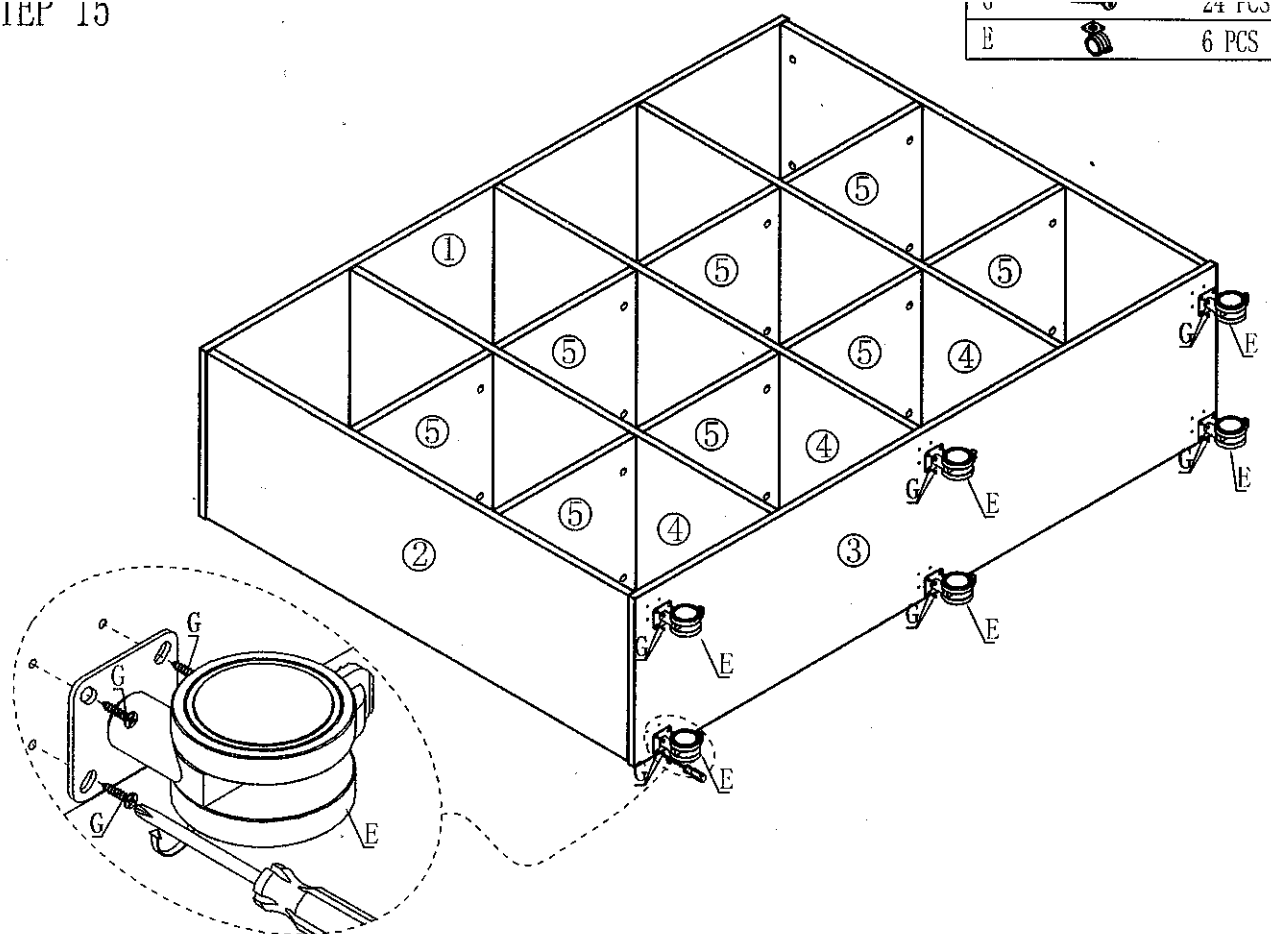

STEP 16

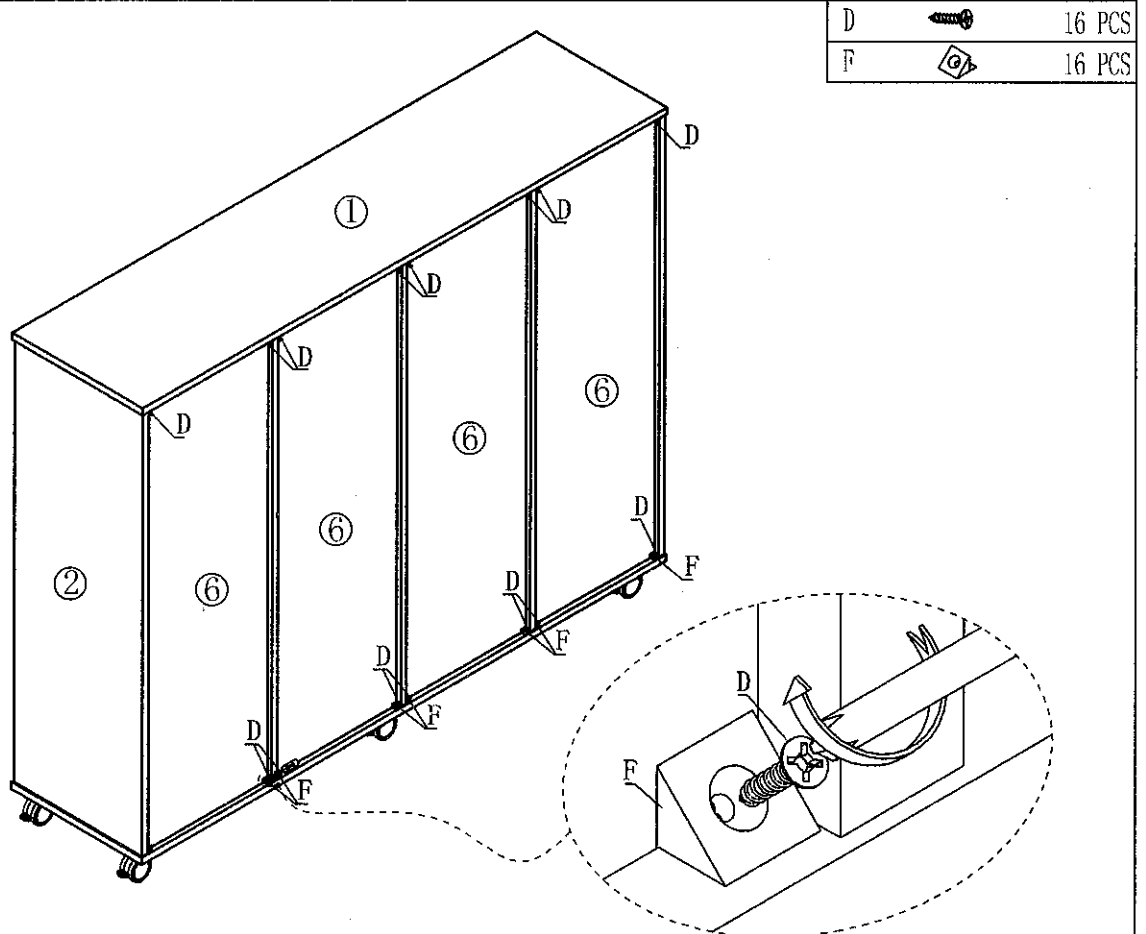

STEP 17

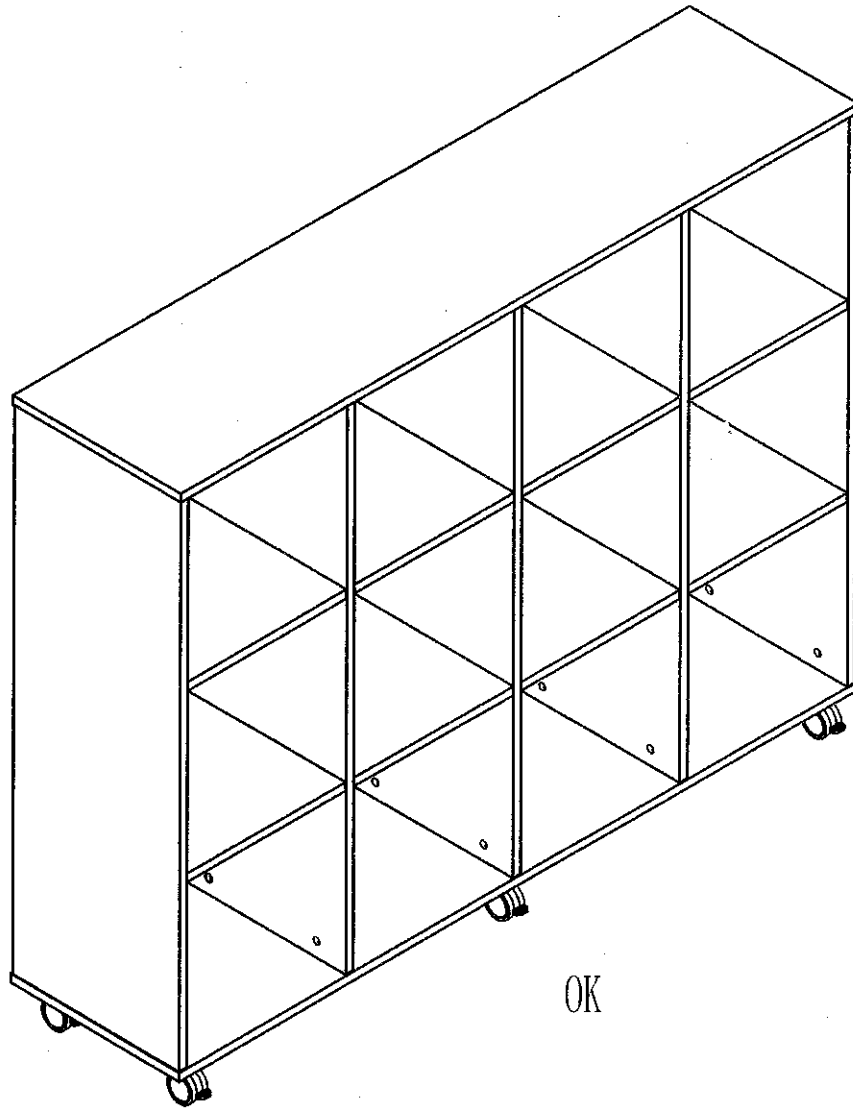

OK